

## Edit Trunk voipvoice: ?

Click [here](#) to switch to a text-based editing window for the trunk.

Name:

Type:

Direction:

Trunk Destination:

State:

Display Name:

Account:

Domain:

Username:

Password:

Password (repeat):

Proxy Address:

CO Lines:

Permissions to monitor this account:

your VoipVoice account username

your VoipVoice account password

Override Codec Preference:

<input type="checkbox"/>	G.711U
<input type="checkbox"/>	G.726
<input type="checkbox"/>	GSM 6.10
<input type="checkbox"/>	G.711A
<input type="checkbox"/>	G.722
<input type="checkbox"/>	G.729A

Lock codec during conversation:  Yes  No

Proposed Duration (s):

Keepalive Time:

Send email on status change:

Strict RTP Routing:  Yes  No

Avoid RFC4122 (UUID):  Yes  No

Generate unique extension identifier:  Yes  No

Accept Redirect:  Yes  No

Interpret SIP URI always as telephone number:  Yes  No

Requires busy tone detection:  Yes  No

Trunk requires out of band-DTMF tones:  Yes  No

insert here your VoipVoice account password.

Prefix:

Global:  Yes  No

Trunk ANI:

Remote Party/Privacy Indication:

Rewrite global numbers:

Failover Behavior:

Is Secure:  Yes  No

Inter-Office Trunk:  Yes  No

Charging Vector:

where we want to send incoming calls

Explicitly list addresses for inbound traffic:

Send call to extension:

Assume that call comes from user:

Ringback:  Message 180  Media

Save